

CORNINGWARE®

USES

- Please use CORNINGWARE® cookware for cooking purpose only .
- CORNINGWARE cookware is extremely versatile. It can be taken straight from the freezer to the oven, microwave, gas or electric stovetop and then to dishwasher or sink – no matter how hot or cold the dish is.
- CORNINGWARE cookware is easy to clean and does not stain or retain odours as will metal and plastic cookware.
- Stovetop use
 - CORNINGWARE cookware retains heat so well, you can use a lower heat setting than normal and save on energy. This also helps prevent sticking or burning of food.
 - For best results, prepare food which are stirred or have liquid as a cooking medium.
 - CORNINGWARE cookware can be used on gas, electric and ceramic stovetops.

- Oven and griller use
 - CORNINGWARE cookware is ideal for all oven types – conventional, convection and toaster ovens.
 - Glass cover must not be placed under the griller or in a toaster oven.
- Microwave use
 - CORNINGWARE cookware is perfect for the microwave.
 - Use pot holders as dish may become hot during cooking.
- Refrigerator and freezer use
 - CORNINGWARE cookware can go from the refrigerator or freezer directly to the stovetop, oven or microwave.

CARE

- Use only wooden, nylon or plastic utensils. Metal utensils can scratch or leave grey marks on the CORNINGWARE cookware surface.
- Use only plastic or nylon cleaning pads and non-abrasive cleansers such as CORNINGWARE Cleaner & Conditioner.

- To loosen cooked-on food, soak cookware in warm soapy water. Cool the glass cover before soaking.

STORAGE

- Store dishes separately if space permits.
- Do not nest, as direct glass to glass contact can damage the cookware.
- Stack carefully by inverting the lids and stacking smaller pieces on top.
- If stacking is not possible due to limited space, nest the cookware by placing a cloth between each piece.

SAFETY

All glass (e.g. cover) and glass-ceramic materials (e.g. CORNINGWARE) are breakable, a severe impact can cause glass product damage, so please take care in use.

- Do not use CORNINGWARE cookware for deep fat frying.

- Do not use for popping corn, caramelising sugar or making candy.
- Use pot holders when handling hot CORNINGWARE cookware in the microwave oven.
- Do not heat empty CORNINGWARE cookware in the microwave oven.
- Do not use or repair chipped, cracked, or broken CORNINGWARE items.
- Place hot CORNINGWARE cookware on a placemat as retained heat could damage bench surfaces.
- Do not use glass cover under a griller or in a toaster oven.
- Do not place a hot glass cover on a cold or wet surface, or handle with a wet cloth.
- Do not use VISIONS cookware for other non-cooking purposes to avoid damage and injuries.

COUNTRY OF ORIGIN

- Vessel : Made in France
Cover : Made in China